Long Gun Staging Rack

Bill of Materials:

2 - 1" x 8" x 96". Treated.


1 ½" patio deck screws

3" patio deck screws

Instructions:

Cut as indicated below.

Side Rails and Side Braces. The 2 3/8" width will depend on the actual width of the board. Board width divided by 3 and allowing for cutting blade width.

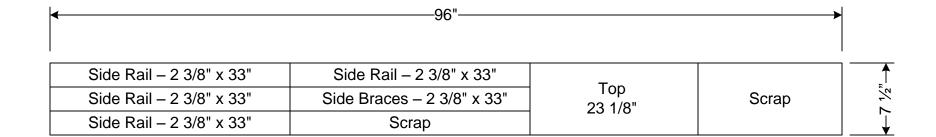

Left Side 26"	Right Side 26"	Front 21"	Back 21"	Scrap	←7 ½"→
------------------	-------------------	--------------	-------------	-------	--------


Rip the Front to 5 $\frac{1}{4}$ " in width. Finished board will be 5 $\frac{1}{4}$ " x 21". This piece is now called Front Big, the smaller piece is Front Small. Drill holes for the screws in the Front Small. Screw both pieces together as shown below using 1 $\frac{1}{2}$ " screws.

Do the same for the Back.





Side Braces. Cut two as shown below.

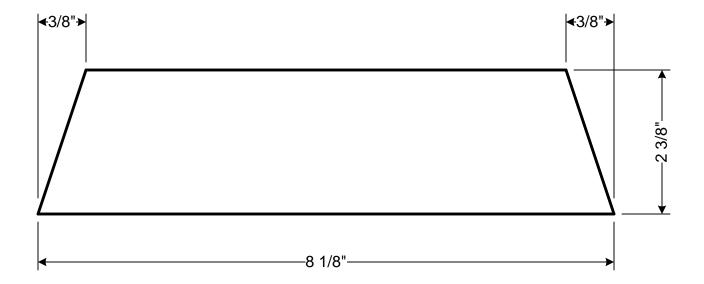

Measure 1 ½" from the top inside on both ends of the Right Side and Left Side.

Place the Front/Rear assemblies on the Right and Left Sides as shown and trace around the Front/Rear assembles with pencil.

Drill screw holes centered in penciled tracings.



Using 1 $\frac{1}{2}$ " screws attached the Front and Back assemblies to the Right Side and Left Side.



Temporarily clamp Side Rails and Top Brace as shown. Side Rail should be flush with top of Top Brace.

Pencil a mark at center line of Top Brace and Side. Using these center line pencil marks and a level bring the pieces into alignment. Drill screw holes in Side and Top Brace. Fasten with 1 ½" screws.






Top. Layout and cut as shown below.

Quart paint can is perfect for the curves.

Optional. Use Router to corner round top edges.

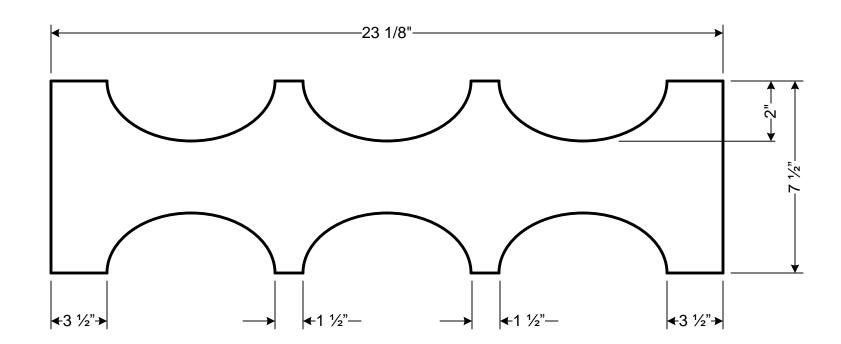

Attach Top to Side Braces with 1 $\frac{1}{2}$ " screws and 3" screws for Side Rails



Instructions: Project finished, Long Gun Rack. Paint or leave natural.

A \$10 donation for the use of these plans can be sent to:

Janet Black Cutter's Raiders 11241 W. 950 S. Akron, IN 46910



